


## Prevent Lost Profits with dual interval checkout weighing



### Profits given away?

Can you legally sell items that weigh over 6kg? Do you know the minimum legal weight you can sell today on your current checkout scales? With Diva you can sell items weighing up to 15kg by weight instead of by unit. In addition, the minimum legal weight is only 40g instead of 100g for most 15kg scales – meaning you can sell more, and give away less.

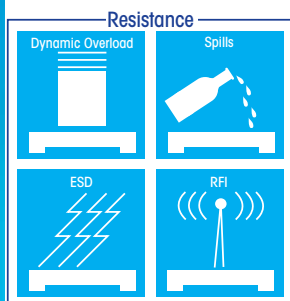

### Durable Design

The Diva scale has been through rigorous testing to stand up to the punishment which is possible in the checkout lane. As the world's leading manufacturer of checkout scales, METTLER TOLEDO durability is legendary.



### Globally Deployable

Diva has received weights and measures approvals for most major markets across the globe. Diva is capable of performing both price computing and weight only applications, making it easy for international retailers to globally standardize their checkout scale solution.



### Metrologic Stratos Series with Diva Scanning with Dual Interval Weighing

Diva enabled scanner scales are perfect for retailers who desire excellent scanning and weighing performance at checkout. Installation is simple with a built in leveling solution. To make life easy, sales and integration with the Metrologic Stratos Scanner is handled completely by certified METTLER TOLEDO technicians.

Technical Data

# Metrologic Diva Scanner Scale

### Scale Features and Benefits

- Excellent Integration with the scanner.
- Dual interval weighing reduces minimum weight threshold, increasing capacity and offering high resolution at lighter weights.
- Built in leveling for easy installation.
- Beautiful and modern display options.
- Simple, single source, purchasing and integration.
- Durable, spill resistant design.

### Price Computing Display Features and Benefits

- Bright, backlit display.
- Backlight turns off automatically to save power.
- Shows 5-digits weight, 6-digits item price, 6-digits total price, and 4-digits tare value.
- Zero and Tare buttons.

### Weight Only Display Features and Benefits


- Bright, backlit display.
- Backlight turns off automatically to save power.
- Displays 5-digit weight.
- Zero and Tare buttons.

### Scale

Capacity	0-6 kg x 0.002 kg and 6-15 kg x 0.005 kg
Minimum Legal Weight	40g
Interfaces	RS-232, Adaptor Cables Available
Communication	Protocols included work with most popular POS systems
Operating Range	-10°C to +40°C, 0-85% humidity, non-condensing
Automatic Zero Maintenance	Assures a stable zero reading
Approvals	NTEP, OIML, CE



**Stratos S Dimensions - 2200 Series**

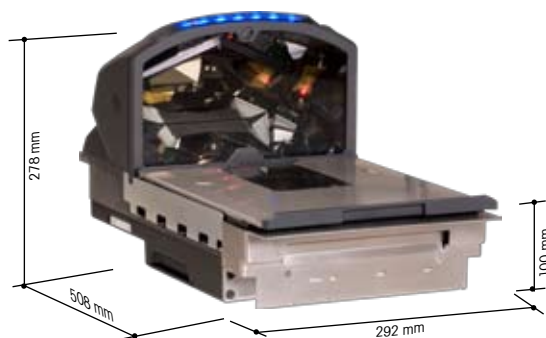

**Stratos H Dimensions - 2300 Series**



**Stratos N Dimensions - 2400 Series**



**Price Computing Display**

**Weight Only Display**

Mettler-Toledo, Australia  
Tel. +61-3-9644 5710

Mettler-Toledo, Netherlands  
Tel. +31-344-638340

For all other countries:  
Mettler-Toledo AG  
Greifensee, Switzerland  
Tel. +41-44-944 22 11  
Fax +41-44-944 31 70

Mettler-Toledo, Belgium  
Tel. +32-2-334 02 11

Mettler-Toledo, SE Asia  
Tel. +65-6890 00 11

Mettler-Toledo, United Kingdom  
Tel. +44-116-235 7070



Quality certificate ISO9001  
Environment certificate ISO14001  
Internet: <http://www.mt.com>  
Worldwide service



Subject to technical changes  
©05/2008 Mettler-Toledo, Inc.  
RT1164.2EE

[www.mt.com/retail](http://www.mt.com/retail)

Visit for more information